



# Anybus Edge Gateway

Firmware Update Instruction

**SOLUTION SHEET**

SCM-1202-145 1.0 en-US ENGLISH




# 1 Firmware Update Instruction

This instruction explains how to update the firmware in the Anybus Edge gateway.

1. Open a web browser and type in the IP address of the gateway. Log in to the gateway, using your credentials.

2. Click the Firmware Update icon.

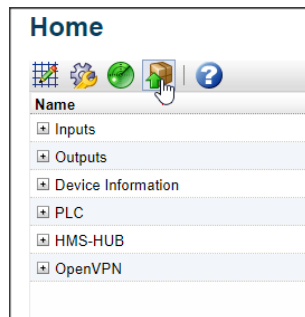

3. Press **Choose File** and locate the firmware file on your computer.



*The firmware file ends with .cup.*

*It is only possible to update to newer firmware than already installed.*

4. Press **Start update** to update the firmware.



*The new firmware will not overwrite any existing configuration or other settings. After the update is complete, you can log in using the same credentials as before.*

